


Wesco Pullboy Z TANDEMBOX

Assembly Instructions




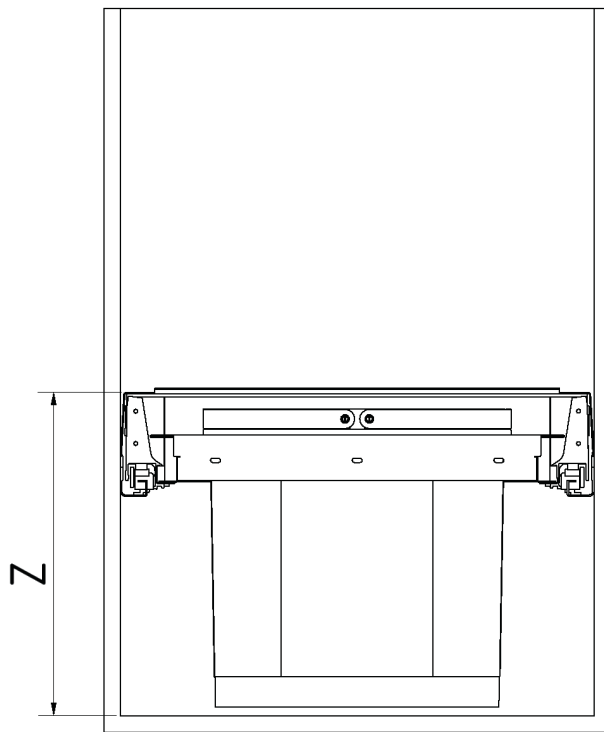

1.


Total installation height
(=Y + 70mm)

Bin	Z
8 L	325 mm
17 L	325 mm
26 L	470 mm
29 L	500 mm
42 L	535 mm
40 L	565 mm
32 L	570 mm

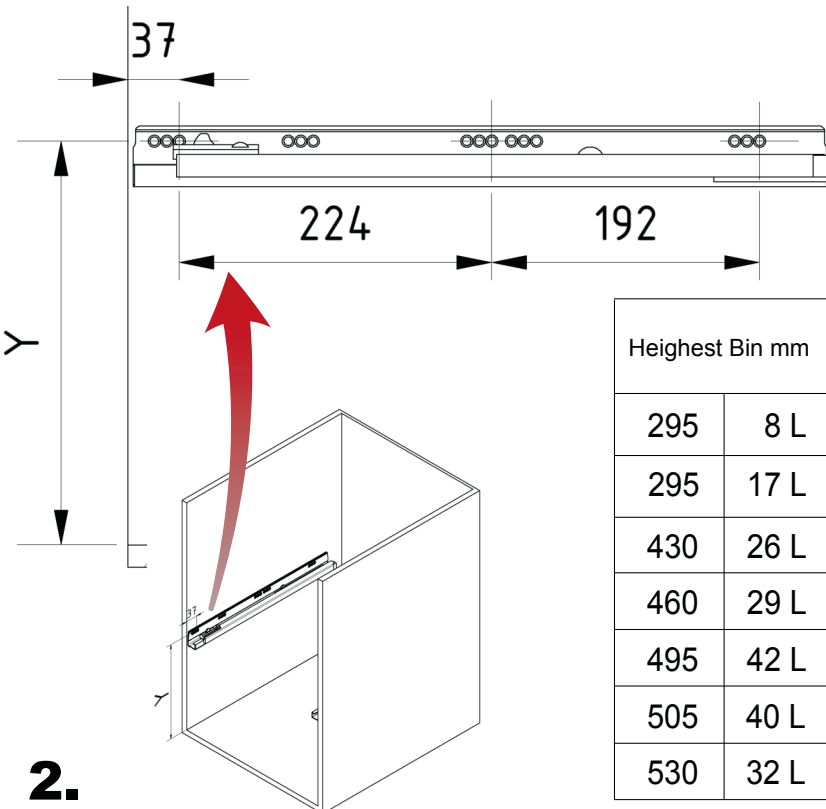

2.


Heighest Bin mm		mind. Y mm
295	8 L	255
295	17 L	255
430	26 L	400
460	29 L	430
495	42 L	465
505	40 L	495
530	32 L	500

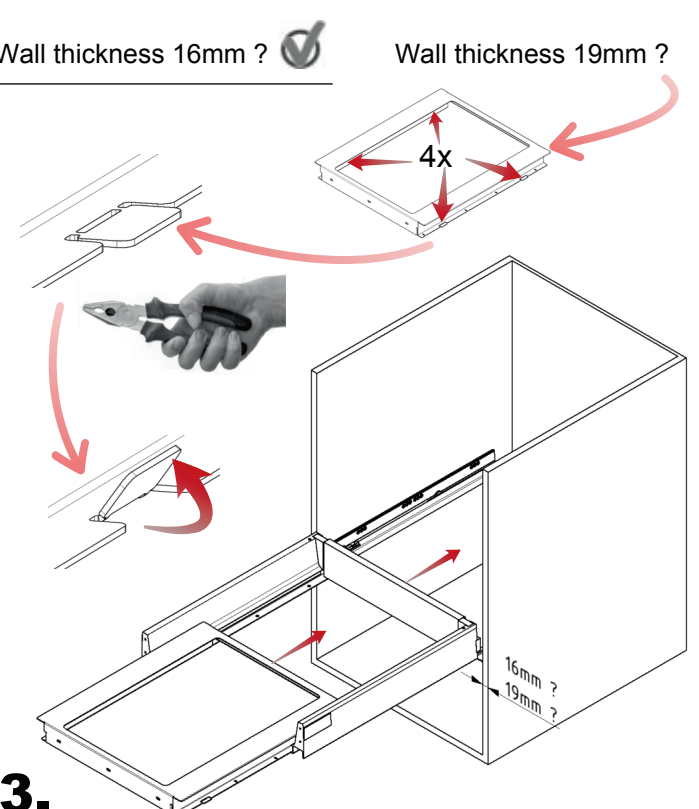

3.


Wall thickness 16mm ? ☒

Wall thickness 19mm ? ☐

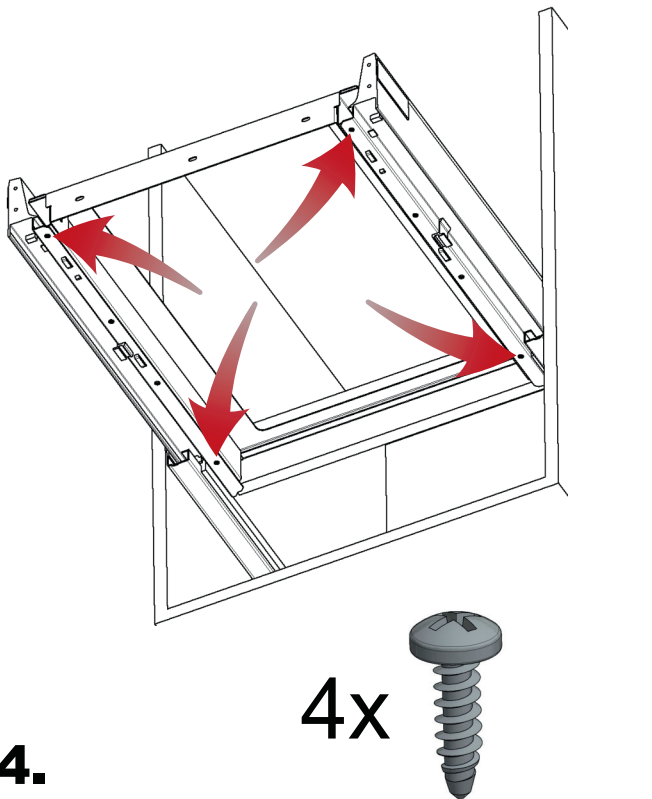

4.


4x

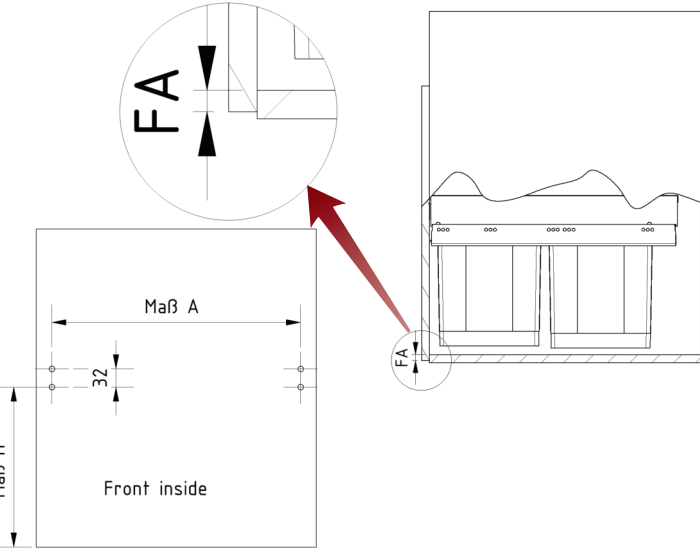

5.

dimension A = cabinet width (mm) - 2x wall thickness(mm) - 31mm
z.B. / e.g. 500mm - 2x16mm - 31mm = 437mm


Maß H = Maß Y + FA (Front overlay) + 15mm
z.B. / e.g. 255 + 12mm + 15mm = 282mm

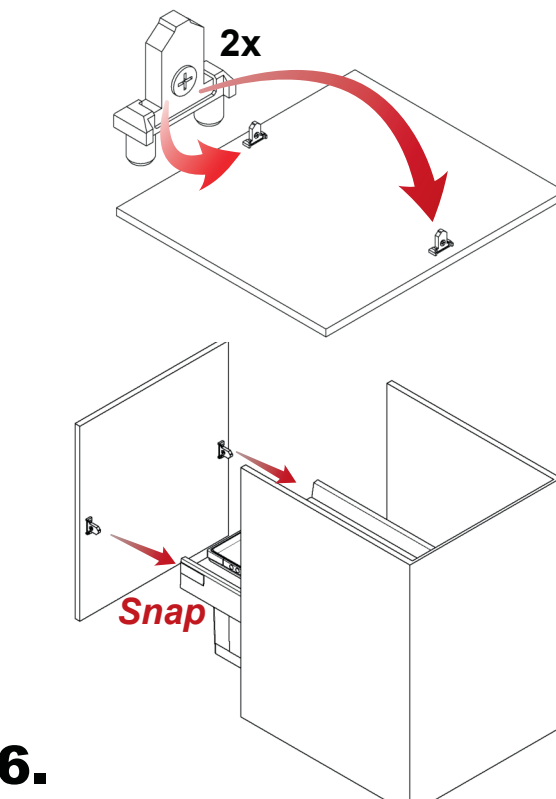

6.

2x

Snap

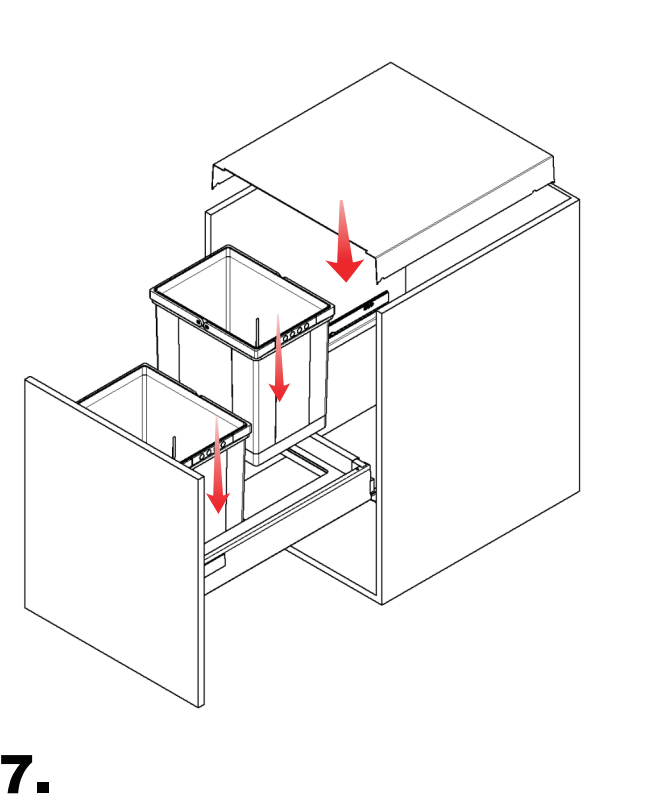

7.